

## Presta Valve Adapter

Two common inner tube styles are used on bike wheels:

- Schrader Inner tubes with a Schrader valve
- Presta inner tubes with a Presta valve

The Presta valve adapter enables the inflation of air into a Presta valve inner tube with a customary (American type) Schrader air hose. The adapter is screwed onto the valve stem before inflating the tube

1. Remove Presta valve cap (usually black).
2. Unscrew valve tip until open. It stays attached to the valve, but unscrews to the end of the valve.
3. Screw large end of adapter onto valve stem.
4. Inflate.
5. Remove adapter.
6. Re-tighten valve core.
7. Replace valve cap.

